

N 5/

Adapter Help

(v1.00)

i Reset button in
o Reset PC
k Reset PC
c Reset Reyboard
k Reset PC
l Reset Reyboard
l Reset Reys
l Reset Reys
l Reset Reys
l Reset Reys
l Reset POSI byte

Adapter [? for help]:

0,

Copyright (c) 1996, 1997, 1998, 1999 The NetBSD Foundation, Inc. All rights reserved. Copyright (c) 1988, 1983, 1986, 1988, 1998, 1991, 1993, 1994 The Regents of the University of California. All rights reserved. NetBSD/i386 (DerWeasel) (ttyE0) NetBSD/i386 (DerWeasel) (ttyE0) NetBSD 1.4.1 (GENERIC) Welcome to NetBSD: Reset PC ? [y/n] login: root login:

Terminal type? [ut220] Don't login as root, use the su command.

Adapter [? for help]:

Award Modular BIOS v4.51PG, An Energy Star Ally Copyright (C) 1984-95, Award Software, Inc.

#401A0-0202 (DerWeasel) (ttyE0)

PENTIUM-S CPU at 120MHz Memory Test: 6040K OK

NetBSD/i386 (DerWeasel) (ttyE0)

login: root

NetBSD 1.4.1 (GENERIC)

Welcome to NetBSD!

Terminal type? [vt220]

Press DEL to enter SETUP, ESC to skip memory test 04/08/97-82430HX-PI55T2P4C-00

MOANTER Bootloader version: *Revision; 1.45 *

0 1 - ADAPTER VI.00

Booting: [1 - ADAPTER VI.00]

... <Esc> to abort...5...4...3...2...1

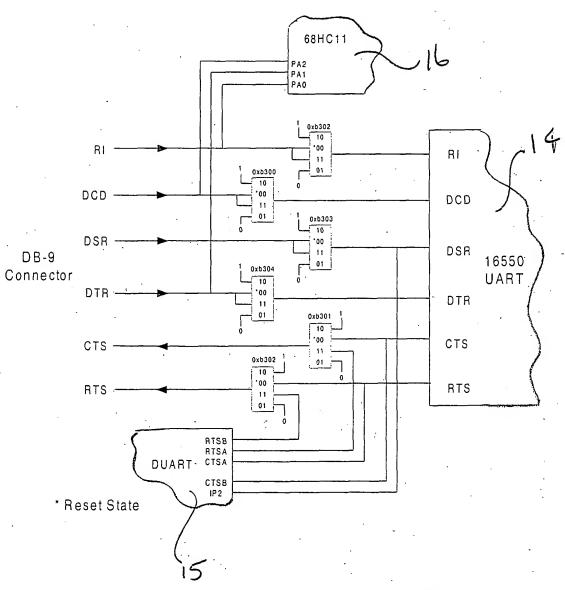


Fig 6

Numeric Pad Keys	
kp0	0
kp1	1 .
kp2	2
kp3	3
kp4	4
kp5	5
kp6	6
kp7	7
kp8	8
kp9	9
kp.	Decimal
kpent	Enter
kp+	Plus
kp-	Minus
kp*	Asterisk
kp/ ,	Slash

POUS Keys	
Miscellaneous Keys	
Right Shift	
Right Control	
Right Alt	
Left Shift	
Left Control	
Left Alt	
Scroll Lock	
Print Screen	
Pause	
Enter	
Tab .	
Escape	
Backspace	
Space	
Minus /	
Hyphen	
Caps Lock	
Num Lock	

Cursor Keys	
. ,	
left .	Left arrow
down	Down arrow
right	Right arrow
up	Up arrow
ins	Insert
del	Delete
home	Home
end	End
pgup	Page Up
pgdn	Page Down

Function Keys	
f1	· 1
f2	2
f3	3
f4	4
f5 .	5
f6	6
f7 .	7
f8	8
f9	9
f10	10
f11 ·	11
f12	12

Modifier Keys	
s-	Right Shift
c-	Right Control
a-	Right Alt
S-	Left Shift
C-	Left Control
A-	Left Alt

Fig 7

Key	Action
C,	Configuration
i/o/r	Reset Button Operations
^L	Redraw Display
m .	Message Buffer
р	Last POST Byte
q	Quit to ROM
Χ .	Send Key To PC
^X	Get KBD Status
1-9,0,-,=	Function Keys

Fly 8